

Application Note 024  
Version 001  
21 April 2018

## Adjustment of EtherMeter's LCD Display Text Contrast.

If the EtherMeter's LCD text has disappeared (or appears too faint), or if the text background is too dark, then the LCD Display Contrast Pot (Potentiometer) may need to be adjusted.

The LCD Display Contrast Pot is located just to the right of the four dip switches, as illustrated in the figure below.

This pot is adjusted at the factory before shipment, and it will generally be rotated to approximately the 3 o'clock position.

If you need to fine-tune this pot at a future date, you will need a small, flat-head screwdriver. Clockwise rotation increases the contrast, and counter-clockwise rotation reduces the contrast.

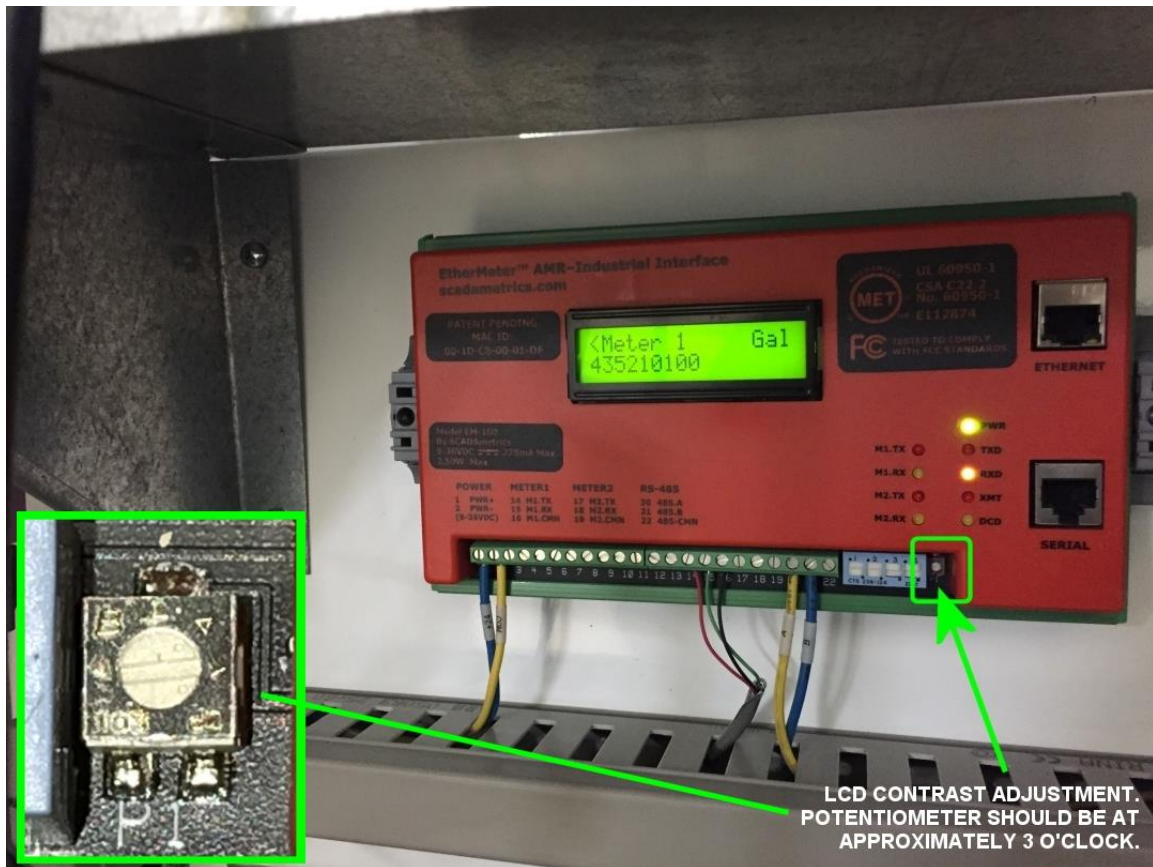


Figure 1. Illustration of the LCD Display Contrast Potentiometer.