

How to Read Mueller Translator Registers
Version 001
28 July 2016

How to Read Mueller Translator Registers

Size	Gallon	Cubic Feet
5/8"	EXPn = +1	EXPn = 0
3/4"	EXPn = +1	EXPn = 0
1"	EXPn = +1	EXPn = 0
1.5"	EXPn = +2	EXPn = +1
2"	EXPn = +2	EXPn = +1
3"	EXPn = +2	EXPn = +1
4"	EXPn = +2	EXPn = +1
6" and above	EXPn = +3	EXPn = +2

Note: The above table assumes that the Translator register is pre-programmed to transmit six (6) digits. Six (6) digits is the maximum allowed for the Translator (recommended).