

## How to Read Honeywell (Elster) evoQ4 MagMeters

### 6-Digit Honeywell/Elster Protocol Version:

Size	Gallon	Cubic Feet	Cubic Meters
All Sizes	EXPn = +3	EXPn = +2	EXPn = +0

### 8-Digit Sensus Protocol Version VFRAME:

Size	Gallon	Cubic Feet	Cubic Meters
All Sizes	EXPn = +1	EXPn = +0	EXPn = -1

### 8-Digit Sensus Protocol Version SHIFTED VFRAME:

Size	Gallon	Cubic Feet	Cubic Meters
All Sizes	EXPn = +0	EXPn = -1	EXPn = -2

#### Notes:

The evoQ4 LCD Display shows the Meter Reading Across Two (2) Lines. The Large-Font Numbers are the Most-Significant Digits, and the Small-Font Numbers are the Least-Significant Digits.

#### **Elster Protocol:**

The Transmitted Reading Will Consist of the Most Significant 6 Digits.

#### **Sensus Protocol, VFRAME:**

The Transmitted Reading Will Consist of the Most Significant 8 Digits.

#### **Sensus Protocol, SHIFTED VFRAME:**

The Transmitted Reading Will Consist of 8 Digits, Starting with the 2<sup>nd</sup>-Most-Significant Digit.