

How to Read Neptune Pro-Read Registers
 Version 001
 26 April 2016

How to Read Neptune Pro-Read Registers

Size	Gallon	Cubic Feet	Cubic Meters
5/8"	EXPn = +1	EXPn = 0	EXPn = -1
3/4"	EXPn = +1	EXPn = 0	EXPn = -1
1"	EXPn = +1	EXPn = 0	EXPn = -1
1.5"	EXPn = 2	EXPn = +1	EXPn = 0
2"	EXPn = 2	EXPn = +1	EXPn = 0
3"	EXPn = 2	EXPn = +1	EXPn = 0
4"	EXPn = 2	EXPn = +1	EXPn = 0
6-12"	EXPn = +3	EXPn = 2	EXPn = +1
16",20"	EXPn = +4	EXPn = +3	EXPn = 2

Note: The Pro-Read Register Displays 6 Digits of Resolution, But the Transmitted Least-Significant Digit Is Rounded to Either 0 or 5.