


Nicor Cable Retrofit Procedures

FOR MODELS SDAW (SCADA DUPLEXER) and RRFW (RADIO-READ FILTER)

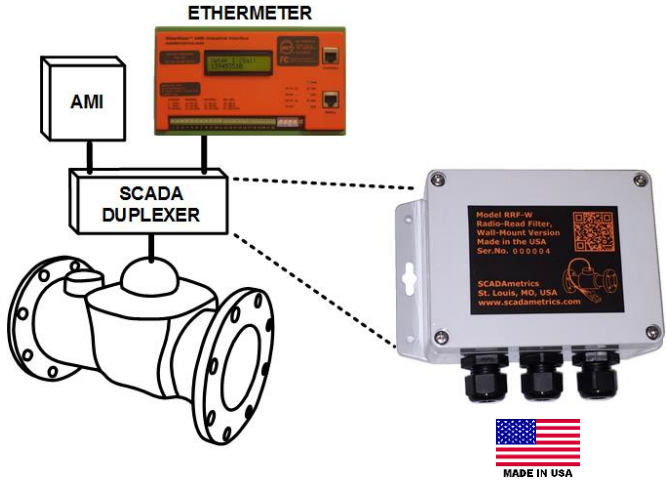

In Applications where the SCADA Duplexer / Radio-Read Filter is to be retrofitted with Nicor Pigtail Cables, These Wiring Procedures Should be Followed:

1. The **Female Nicor Cable** Should Be Run Through the Middle Cable Gland.
2. The **Female Nicor Cable's** Internal Conductor Wires Should Be Connected to the SDAW/RRFW Terminal Block as Follows:
 - 4 - RED
 - 5 - GREEN
 - 6 - BLACK
3. The **Male Nicor Cable** Should Be Run Through the Right-Most Cable Gland.
4. The **Male Nicor Cable's** Internal Conductor Wires Should Be Connected to the SDAW/RRFW Terminal Block as Follows:
 - 7 - RED
 - 8 - GREEN
 - 9 - BLACK
5. Utility Hookup:

Female Nicor Cable ↔ Water Meter
Male Nicor Cable ↔ AMI/AMR MTU

