

Application Note 008
Version 002
06 February 2010

Configuring An EtherMeter™ and PLC For Pulse-Based Flow Metering And Batching Operations.

(Note: The example in this document uses an Allen Bradley MicroLogix 1400 PLC and the RsLogix programming environment. However, these procedures can be generally adapted to any Allen Bradley or Modbus-based PLC.)

The purpose of this document is to provide assistance to the PLC user who wishes to use an EtherMeter for pulse-based batching operations. This document assumes that the user is well-versed in PLC's and a ladder-logic programming environment.

In this example, the PLC and EtherMeter are connected via Ethernet. In this example, EtherNet/IP is the connection protocol, although Modbus/TCP could also be used with a compatible PLC.

When creating an EtherNet/IP client/server connection between a MicroLogix PLC (client) and an EtherMeter™ (server), no special setup is generally required within the EtherMeter's Setup Menu. The EtherMeter features an "always-on" EtherNet/IP server on TCP logical port 44818; and it is configured to auto-detect and service incoming client requests from Allen Bradley PLC's. For other PLC brands, the EtherMeter features an "always-on" Modbus/TCP server on TCP logical port 502.

To simplify integration into an Allen Bradley network, the EtherMeter emulates a MicroLogix/SLC5xx.

In this demonstration, the Allen Bradley PLC used was a Model MicroLogix 1400.

1. Wiring Configuration.

In this example, the Ethernet ports of the MicroLogix and EtherMeter are wired directly to each other, without an Ethernet switch, using a single Ethernet crossover cable. Alternatively, the Ethernet ports of both the MicroLogix and EtherMeter could be connected to a common Ethernet switch if expanded network connectivity is desired. For reference, the wiring and hardware configuration is illustrated in Figure 1.

2. EtherMeter Configuration.

The EtherMeter was configured for two (2) pulse-based meters with the following setup commands:

```
SET PWR1 0  
SET PWR2 0
```

3. Meter Registers.

The Sensus encoder-type "ICE" registers shown in Figure 1 were replaced with two (2) pulse-based meters.

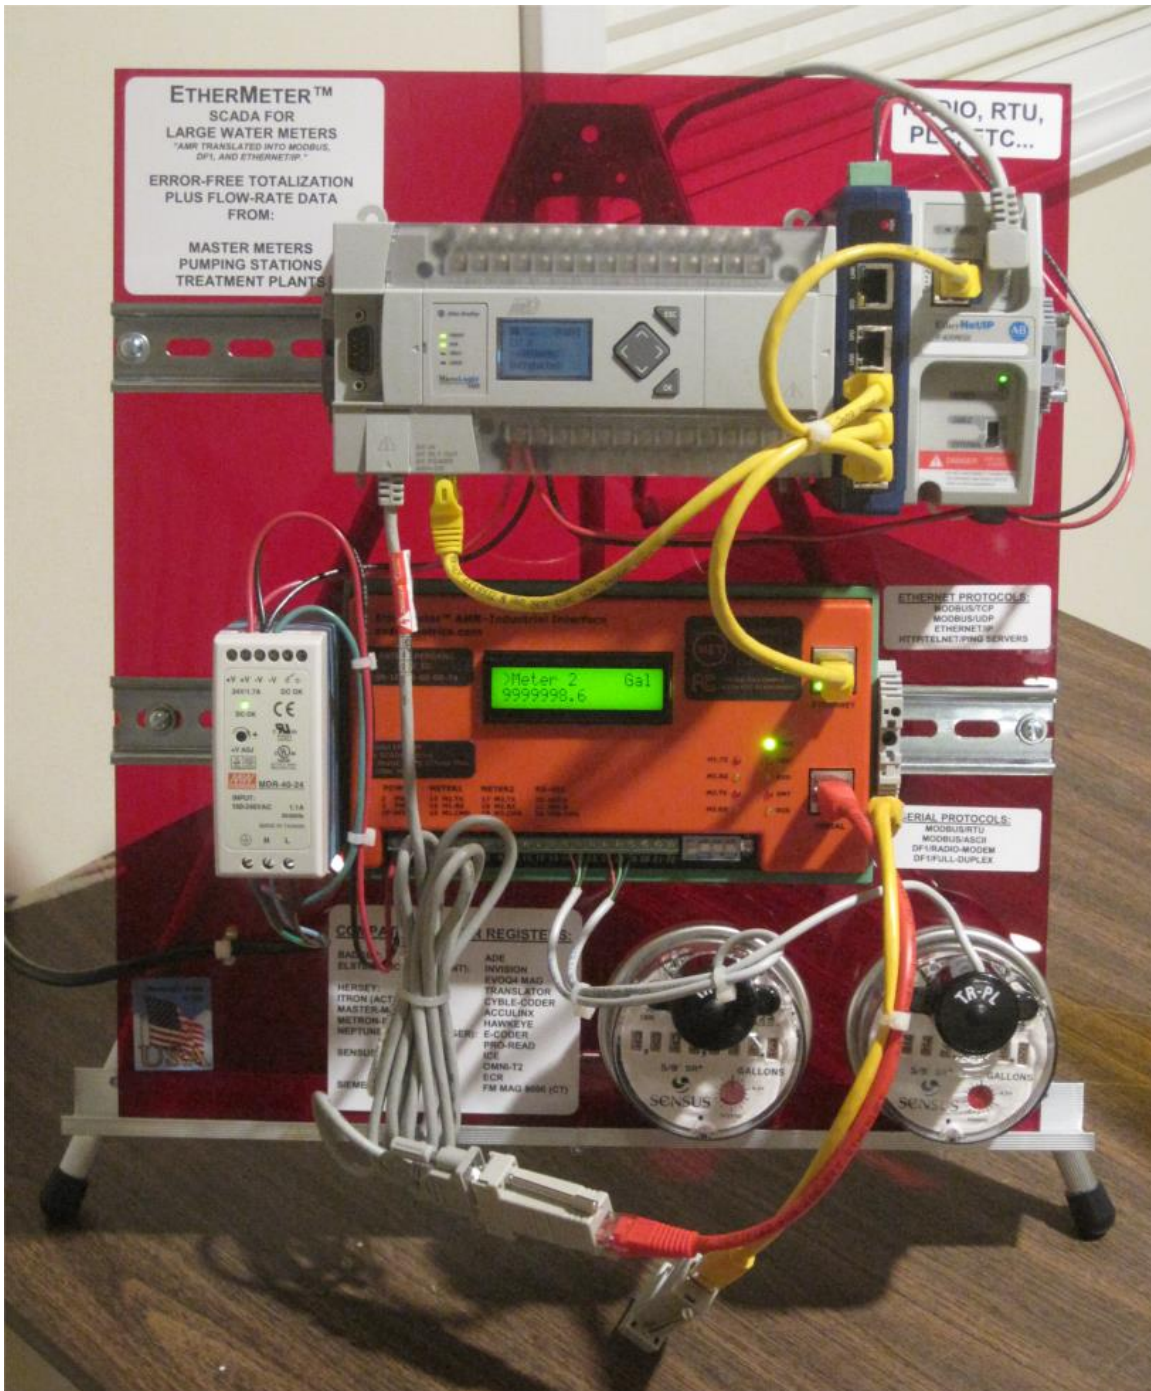


Figure 1. MicroLogix EtherNet/IP Communication Demonstration Panel. MicroLogix 1400 PLC / EtherMeter Hardware and Wiring Configuration.

Note(s):

- 1. The MicroLogix and EtherMeter are both powered by a single AC/DC Converter (24VDC output).**

4. RsLogix Message Instruction Configuration: Read Meter Totalizations and Flow Rates

In the ladder logic fragment illustrated in Figure 2, a timer-initiated message instruction is performed to read meter totalization and flow rate data from two (2) attached meters. When using EtherNet/IP, the data is read from the EtherMeter's N7:0...7 registers; and the data is later transferred into the PLC's long-integer registers for future mathematical manipulations. (For Modbus/TCP, the data would be read from the EtherMeter's 40001...40008 registers.) The setup of the EtherNet/IP message instruction is illustrated in Figures 3a and 3b.

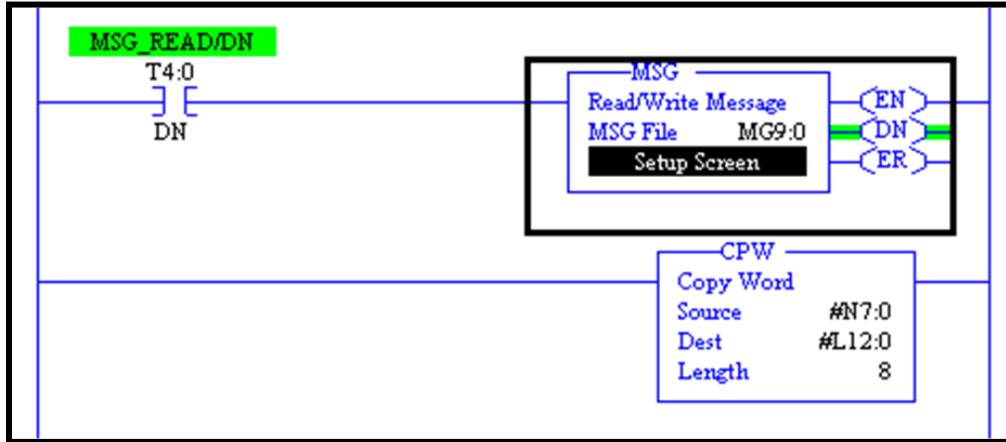


Figure 2. Ladder Logic Fragment: Polling An EtherMeter For Data.

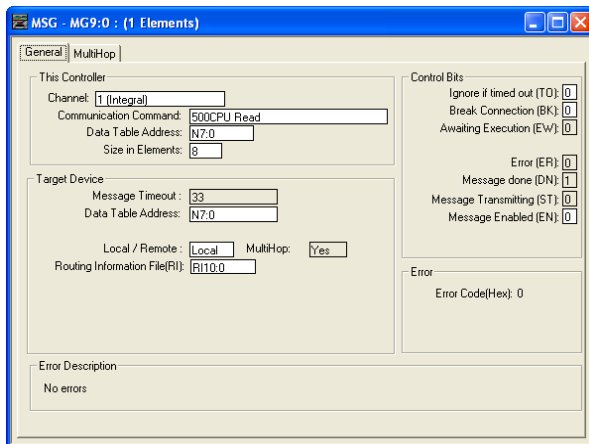


Figure 3a. Message Instruction Details: EtherMeter Totalization & Flow Rate Data

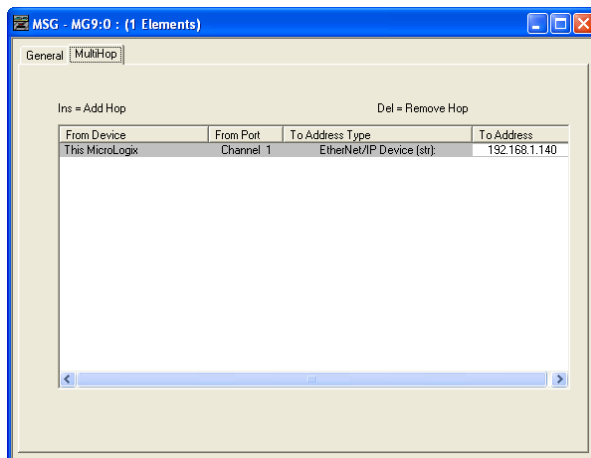


Figure 3b. Message Instruction Details: EtherMeter Totalization & Flow Rate Data

5. RsLogix Message Instruction Configuration: Reset Pulse-Based Totalization

In the ladder logic fragment illustrated in Figure 4, a timer-initiated message instruction is performed to write a 16-bit word to the attached EtherMeter's B10:0 file. (For Modbus, the "Write Single/Multiple Coil" instruction should be used.) The source word on the MicroLogix in this example is N18:0. The setup details of the message instruction are illustrated in Figures 5a and 5b.

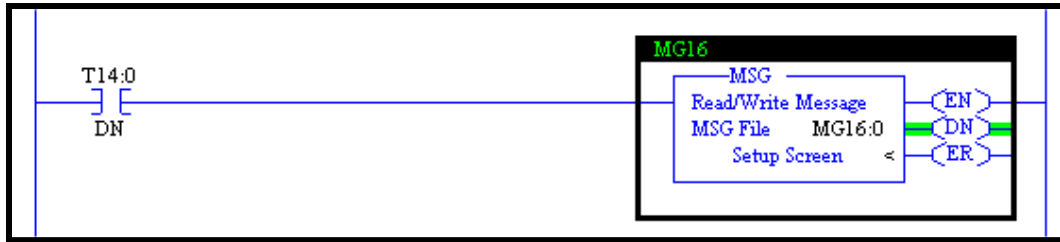


Figure 4. Ladder Logic Fragment: Writing To Coils On An EtherMeter

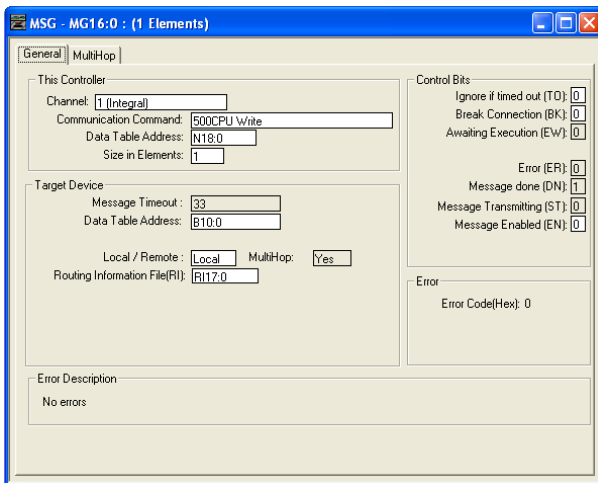


Figure 5a. Message Instruction Details: Writing To Coils On An EtherMeter

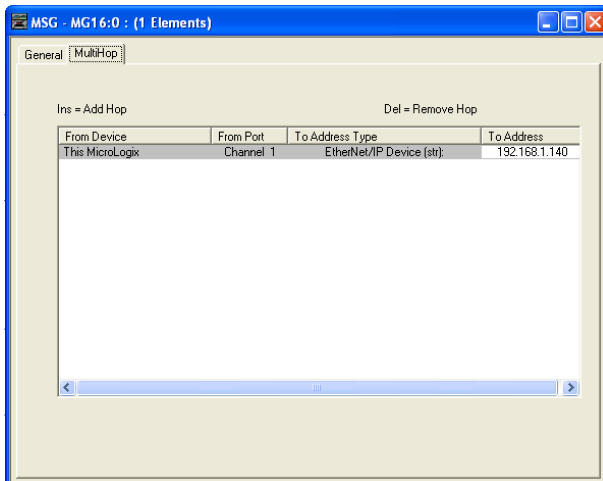


Figure 5b. Message Instruction Details: Writing To Coils On An EtherMeter

6. Writing To The EtherMeter Coils.

In this example, the N18:0 word within the MicroLogix was manually edited to achieve the desired results:

MicroLogix Memory	EtherMeter Memory	Result
N18:0/0 = 1 N18:0/0 = 0	B10:0/0 = 1 B10:0/0 = 0	Aux Digital Output 1 = ON = OFF
N18:0/1 = 1 N18:0/1 = 0	B10:0/1 = 1 B10:0/1 = 0	Aux Digital Output 2 = ON = OFF
N18:0/8 = 1	B10:0/8 = 1	Reset Pulse-Based CNT1 to ZERO
N18:0/9 = 1	B10:0/9 = 1	Reset Pulse-Based CNT2 to ZERO

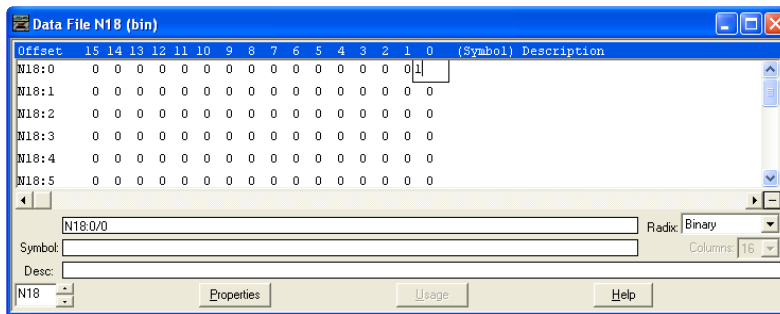


Figure 6. Write a '1' to B10:0/0:

EtherMeter Aux Digital Output 1 = ON.

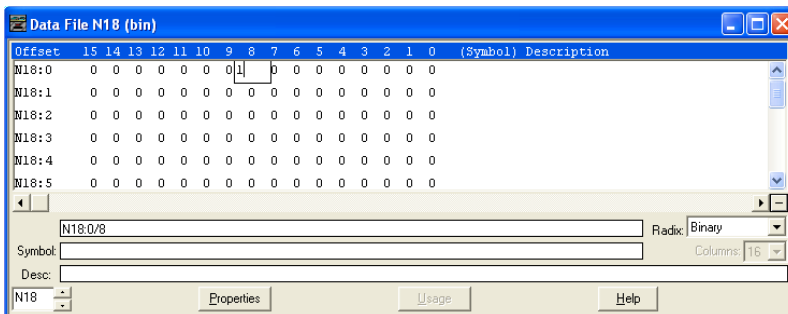


Figure 7. Write a '1' to B10:0/8:

Reset EtherMeter CNT1 to ZERO.

Alternatively, from a Modbus/TCP PLC, the "Write Single/Multiple Coil" instruction should be used:

EtherMeter Coil	Result
00001 = 1 00001 = 0	Aux Digital Output 1 = ON = OFF
00002 = 1 00002 = 0	Aux Digital Output 2 = ON = OFF
00009 = 1	Reset Pulse-Based CNT1 to ZERO
00010 = 1	Reset Pulse-Based CNT2 to ZERO